

PFS 30

PRIMING INSTRUCTION



35LPM 240v



completely fill the jars with water with filters present.



Fill the pump motor housing with water by pouring water into the waste out tap connector.



Attach waste out hose to the tap connector. Ensuring it is fully locked into place.



Attach waste in hose to the tap connector.



Operate the pump switch and ensure water is flowing at the waste out hose



Ensure the tap connector has a solid seal. Any air leaks will cause failure to transfer water.